

SMART KEY ERASER v.2

Standalone device to renew used SMART-keys for TOYOTA/LEXUS

Supported types of keys: D4/94/98/88/A8/A9/39



Make sure SMART-key has a healthy battery inside!

88/A8 types of keys:

1. Place SMART-key on the mark (+)
2. Press and hold device button. If the key in good condition and properly placed -type of key will be recognized. (look "Type of key recognition" chapter)
3. After some blinks of the RED led, device switches to constant GREEN led– release button (SMART-key successfully renewed)

94/D4/98 types of keys:

1. Place SMART-key on the mark (+)
2. Press and hold device button. If the key in good condition and properly placed -type of key will be recognized. (look "Type of key recognition" chapter)
3. Device will blink with GREEN led 9 times during erasing process (key LED also may blink).
4. Constant GREEN led indicates that SMART-key successfully renewed

Explanation of the LED signals:

- Blinking RED – Answer from SMART-key is pending
- Blinking GREEN – procedure is in progress
- GREEN lit – procedure is done
- GREEN and RED simultaneously blinking – Key type recognition is in progress
- GREEN and RED blinking in turn – change the battery in SMART-key

Type of key recognition (GREEN and RED simultaneously blinking):

- 1 time – D4 or 94
- 2 times – 98
- 3 times – 88
- 4 times – A8
- 5 times – A9
- 6 times – 39